




Computer Controlled **Heat Pump Unit** (two condensers (water and air) and one evaporator (air))



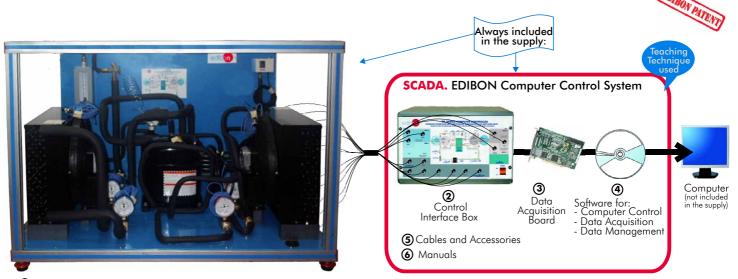


①Unit: THB2AC. Heat Pump Unit (two condensers (water and air) and one evaporator (air)).

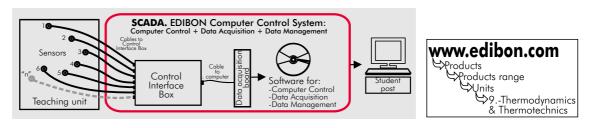

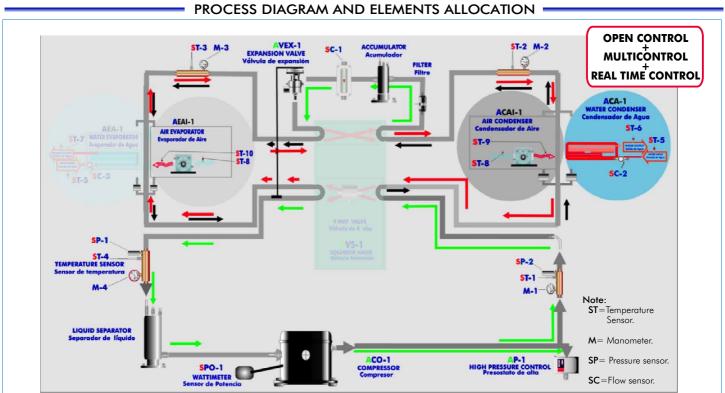









Certificates ISO 14000 and ECO-Management and Audit Scheme (environmental management)



Items supplied as standard

① THB2AC. Unit:

Bench-top unit.

Anodized aluminium structure and panels in painted steel (epoxy paint).

Main metallic elements in stainless steel.

Diagram in the front panel with similar distribution to the elements in the real unit.

Cooling compressor, computer controlled.

Air condenser, computer controlled.

Water condenser.

High pressure control.

Coolant accumulation tank.

Cooling filter.

Expansion valve.

Air evaporator, computer controlled.

Tank of division of the cooling liquid.

4 Manometers.

9 Temperature sensors (4 sensors measure the cooling temperature, 2 sensors measure the water temperature, 3 sensors measure the air temperature):

Temperature sensor, J type (compressor outlet).

Temperature sensor, J type (condenser outlet).

Temperature sensor, J type (evaporator inlet).

Temperature sensor, J type (compressor inlet).

Temperature sensor, J type (water inlet).

Temperature sensor, J type (water condenser outlet/water).

Temperature sensor, J type (air condenser outlet/air).

Temperature sensor, J type (evaporator outlet/air).

Temperature sensor, J type (room air).

2 Flow sensors:

Cooling flow sensor. Water flow sensor (water condenser).

2 Pressure sensors:

Cooling pressure sensor (compressor outlet). Cooling pressure sensor (compressor inlet).

Wattmeter.

 $Enthalpy\,diagram\,of\,the\,refrigerant\,R134a.$

2THB2AC/CIB. Control Interface Box:

Control interface box with process diagram in the front panel and with the same distribution that the different elements located in the unit, for an easy understanding by the student.

All sensors, with their respective signals, are properly manipulated from -10V. to \pm 10V. computer output.

Sensors connectors in the interface have different pines numbers (from 2 to 16), to avoid connection errors. Single cable between the control interface box and computer.

The unit control elements are permanently computer controlled, without necessity of connections during the whole process test procedure.

Simultaneously visualization in the computer of all parameters involved in the process.

Calibration of all sensors involved in the process.

Real time curves representation about system responses. Storage of all the process data and results in a file. Graphic representation, in real time, of all the process/system responses.

All the actuators' values can be changed at any time from the keyboard allowing the analysis about curves and responses of the whole process. All the actuators and sensors values and their responses are placed in only one computer screen.

Shield and filtered signals to avoid external interferences.

Real time computer control with flexibility of modifications from the computer keyboard of the parameters, at any moment during the process. Real time computer control for pumps, compressors, resistances, control

Open control allowing modifications, at any time and in a real time, of parameters involved in the process simultaneously

Three safety levels, one mechanical in the unit, other electronic in control interface and the third one in the control software.

③ DAB. Data Acquisition Board:

PCI Data acquisition board (National Instruments) to be placed in a computer slot. Bus PCI.

Channels = 16 single-ended or 8 differential. Resolution = 16 bits, 1 in 65536. Analog input:

Sampling rate up to: 250 KS/s (Kilo samples per second). Input range (V) = ± 10 V. Data transfers=DMA, interrupts, programmed I/O. Number of DMA channels=6.

Analog output: Channels=2. Resolution=16 bits, 1 in 65536. Maximum output rate up to: 833 KS/s.

Output range(V)= ± 1 0V. Data transfers=DMA, interrupts, programmed I/0.

Digital Input/Output: Number of channels=24 inputs/outputs. D0 or D1 Sample Clock frequency: 0 to 1 MHz. Timing: Counter/timers=2. Resolution: Counter/timers: 32 bits.

THB2AC/CCSOF. Computer Control + Data Acquisition + Data Management Software:

Compatible with actual Windows operating systems. Graphic and intuitive simulation of the process in screen. Compatible with the industry standards.

Registration and visualization of all process variables in an automatic and simultaneously way.

Flexible, open and multicontrol software, developed with actual windows graphic systems, acting simultaneously on all process parameters.

Management, processing, comparison and storage of data.

Sampling velocity up to 250,000 data per second guaranteed.

Calibration system for the sensors involved in the process.

It allows the registration of the alarms state and the graphic representation in real time.

Comparative analysis of the obtained data, after the process and modification of the conditions during the process.

Open software, allowing to the teacher to modify texts, instructions. Teacher's as student's passwords to facilitate the teacher's control on the student, and allowing the access at different work levels.

This unit allows that the 30 students of the classroom can visualize simultaneously all results and manipulation of the unit, during the process, by using a projector.

⑤ Cables and Accessories, for normal operation.

(6) Manuals: This unit is supplied with 8 manuals: Required Services, Assembly and Installation, Interface and Control Software, Starting-up, Safety, Maintenance, Calibration & Practices Manuals.



THB2AC. Unit



THB2AC/CIB





*References 1 to 6: THB2AC + THB2AC/CIB + DAB + THB2AC/CCSOF + Cables and Accessories + Manuals are included in the minimum supply, enabling a normal operation. Continue...

www.edibon.com

Complementary items to the standard supply

PLC. Industrial Control using PLC (7 and 8):

⑦ PLC-PI. PLC Module:

Circuit diagram in the front panel.

Front panel:

Digital inputs(X) and Digital outputs (Y) block:

16 Digital inputs, activated by switches and 16 LEDs for confirmation (red).

14 Digital outputs (through SCSI connector) with 14 LEDs for message (green).

Analog inputs block:

16 Analog inputs (-10V. to + 10V.) (through SCSI connector).

Analog outputs block:

4 Analog outputs (-10V. to +10V.)(through SCSI connector).

Touch screen:

High visibility and multiple functions.

Display of a highly visible status.

Recipe function.

Bar graph function.

Flow display function.

Alarm list.

Multi language function.

True type fonts.

Back panel:

Power supply connector.

Fuse 2A.

RS-232 connector to PC.

USB 2.0 connector to PC.

Inside

Power supply outputs: 24 Vdc, 12 Vdc, -12 Vdc, 12 Vdc variable.

Panasonic PLC:

High-speed scan of $0.32 \, \mu sec.$ for a basic instruction.

Program capacity of 32 Ksteps, with a sufficient comment area.

Free input AC voltage(100 to 240 V AC).

DC input: 16 (24 V DC).

Relay output: 14 (250 VA AC/2 A).

High-speed counter.

Multi-point PID control.

Digital inputs/outputs and analog inputs/outputs Panasonic modules.

Communication RS232 wire, to computer (PC).

® THB2AC/PLC-SOF. PLC Control Software:

For this particular unit, always included with PLC supply.

Items available on request

THB2AC/CAL. Computer Aided Learning Software (Results Calculation and Analysis).

19THB2AC/FSS. Faults Simulation System.



PLC-PI

Page 3 www.edibon.com

EXERCISES AND PRACTICAL POSSIBILITIES

Some Practical Possibilities of the Unit:

- 1.- Determination of the inlet power, heat produced and performance coefficient. Air as heat source. (Water-air heat pump).
- 2.- Determination of the inlet power, heat produced and performance coefficient. Air as heat source. (Air-air heat pump).
- 3.- Preparation of performance curves of the heat pump with different inlet and outlet temperatures. Air as heat source. (Water-air heat pump).
- 4.- Preparation of performance curves of the heat pump at different inlet and outlet temperatures. Air as heat source. (Air-air heat pump).
- Lay out of the steam compression cycle in a diagram P-H and comparison with the ideal cycle. Air as heat source. (Water-air heat pump).
- 6.- Lay out of the steam compression cycle in a diagram P-H and comparison with the ideal cycle. Air as heat source. (Air-air heat pump).
- 7.- Preparation of the performance curves of the heat pump based on the properties of the refrigerant and at different condensation and evaporation temperatures. Air as heat source. (Water-air heat pump).
- 8.- Preparation of the performance curves of the heat pump based on the properties of the refrigerant and at different condensation and evaporation temperatures. Air as heat source. (Air- air heat pump).

Other possible practices:


- 9.- Temperature sensors calibration.
- 10.- Flow sensors calibration.
- 11.- Pressure sensors calibration.

Practices to be done by PLC Module (PLC-PI)+PLC Control Software:

- Control of the THB2AC unit process through the control interface box without computer.
- 13.- Visualization of all the sensors values used in THB2AC unit process.

- 14.- Calibration of all sensors included in THB2AC unit process.
- 15.- Hand on of all the actuators involved in the THB2AC unit process.
- 16.- Realization of different experiments, in automatic way, without having in front the unit. (This experiment can be decided previously).
- 17.- Simulation of outside actions, in the cases do not exist hardware elements (Example: test of complementary tanks, complementary industrial environment to the process to be studied, etc).
- 18.- PLC hardware general use and manipulation.
- 19.- PLC process application for the THB2AC unit.
- 20.- PLC structure.
- 21.- PLC inputs and outputs configuration.
- 22.- PLC configuration possibilities.
- 23.- PLC program languages.
- 24.- PLC different programming standard languages.
- 25.- New configuration and development of new process.
- 26.- Hand on an established process.
- 27.- To visualize and see the results and to make comparisons with the THB2AC unit process.
- 28.- Possibility of creating new process in relation with the THB2AC unit.
- 29.- PLC Programming Exercises.
- 30.- Own PLC applications in accordance with teacher and student requirements.

POSSIBILITIES OF OTHER AVAILABLE EXPANSIONS

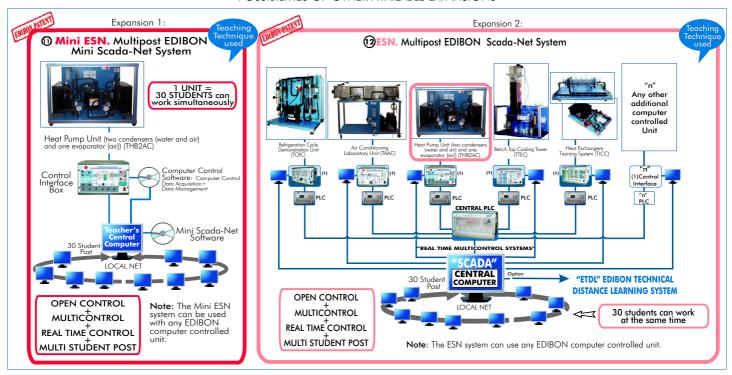

ORDER INFORMATION

Items supplied as standard:

Minimum configuration for normal operation includes:

- ①Unit: THB2AC. Heat Pump Unit (two condensers (water and air) and one evaporator (air).
- ②THB2AC/CIB. Control Interface Box.
- 3DAB. Data Acquisition Board.
- THB2AC/CCSOF. Computer Control + Data Acquisition + Data Management Software.
- **⑤** Cables and Accessories, for normal operation.
- Manuals.
- * IMPORTANT: Under THB2AC we always supply all the elements for immediate running as 1, 2, 3, 4, 5 and 6.

Complementary items to the standard supply:

PLC. Industrial Control using PLC.(7 and 8):

- 7 PCL-PI.PLC Module.
- THB2AC/PLC-SOF. PLC Control Software.
- THB2AC/CAL. Computer Aided Learning Software (Results Calculation and Analysis). (Available on request).
- (Available on request).

Expansions

- Mini ESN. Multipost EDIBON Mini Scada-Net System.
- @ESN. Multipost EDIBON Scada-Net System

Page 4 www.edibon.com

REQUIRED SERVICES

Electrical supply: 220V., 1-phase + neutral + ground, 50 Hz.; or 110V., 1-phase + neutral + ground, 60Hz.; and 1 CV max.

Water supply and drainage.

Computer (PC).

DIMENSIONS & WEIGHTS

THB2AC Unit: -Dimensions: 900 x 600 x 500 mm. approx.

-Weight: 85 Kg. approx.

Control Interface Box: -Dimensions: 490 x 330 x 310 mm. approx.

-Weight: 10 Kg. approx.

PLC Module (PLC-PI): -Dimensions: 490 x 330 x 310 mm. approx.

-Weight: 30 Kg. approx.

RECOMMENDED ACCESSORIES

For refilling R134a refrigerant and maintenance, we recommend:

- T/KIT1. Maintenance Kit, containing: vacuum pump, hoses and manometers.
- T/KIT2. Maintenance Kit, containing: leakage detector.
- R134a refrigerant (to be acquiered by the customer locally).

AVAILABLE VERSIONS =

Offered in this catalogue:

- THB2AC. Computer Controlled Heat Pump Unit (two condensers (water and air) and one evaporator (air)).

Offered in other catalogues:

- THB2AB. Heat Pump Unit (two condensers (water and air) and one evaporator (air)).

OTHER AVAILABLE HEAT PUMP UNITS

- THIBAR22C. Computer Controlled Heat Pump+ Air Conditioning + Refrigeration Unit with Cycle Inversion Valve.
- THIBAR22B. Heat Pump+ Air Conditioning + Refrigeration Unit with Cycle Inversion Valve.
- THB22C. Computer Controlled Heat Pump Unit (two condensers (water and air) and two evaporators (water and air)).
- THB22B. Heat Pump Unit (two condensers (water and air) and two evaporators (water and air)).
- THB2LC. Computer Controlled Heat Pump Unit (two condensers (water and air) and one evaporator (water)).
- THB2LB. Heat Pump Unit (two condensers (water and air) and one evaporator (water)).
- THBL2C. Computer Controlled Heat Pump Unit (one condenser (water) and two evaporators (water and air)).
- THBL2B. Heat Pump Unit (one condenser (water) and two evaporators (water and air)).
- THBA2C. Computer Controlled Heat Pump Unit (one condenser (air) and two evaporators (water and air)).
- THBA2B. Heat Pump Unit (one condenser (air) and two evaporators (water and air)).
- THBALC. Computer Controlled Heat Pump Unit (one condenser (air) and one evaporator (water)).
- THBALB. Heat Pump Unit (one condenser (air) and one evaporator (water)).
- **THBLAC.** Computer Controlled **Heat Pump Unit** (one condenser (water) and one evaporator (air)).
- THBLAB. Heat Pump Unit (one condenser (water) and one evaporator (air)).
- **THBAAC.** Computer Controlled **Heat Pump Unit** (one condenser (air)and one evaporator (air)).
- THBAAB. Heat Pump Unit (one condenser (air) and one evaporator (air)).
- THBLLC. Computer Controlled Heat Pump Unit (one condenser (water) and one evaporator (water)).
- THBLLB. Heat Pump Unit (one condenser (water) and one evaporator (water)).
- *Specifications subject to change without previous notice, due to the convenience of improvements of the product.



C/Del Agua, 14. Polígono Industrial San José de Valderas. 28918 LEGANÉS. (Madrid). SPAIN.

Phone: 34-91-6199363 FAX: 34-91-6198647

E-mail: edibon@edibon.com WEB site: www.edibon.com

Issue: ED01/10 Date: October/2010

REPRESENTATIVE: